



Pen Cozy

The Pen Cozy is a black foam PVC sleeve designed to fit snugly on your electronic pen to provide additional grip and to prevent you from inadvertently pressing the buttons on the pen, while making deliberate contact easy and accessible. Some users grip the pen in such a way that, as they move the pen, their fingers come in contact with the buttons when that is not the user's intention.

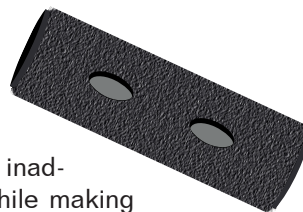

The Pen Cozy is a user add-on device for those users who prefer a gripper on their electronic pen and/or want to prevent unintentional contact with the buttons. If you are not accidentally clicking the buttons on your electronic pen as you use it, and you do not require extra grip, there is no need to install the Pen Cozy.

Installation

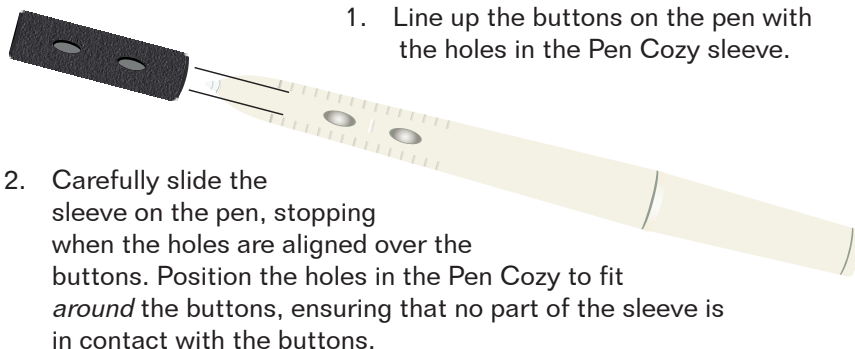1. Line up the buttons on the pen with the holes in the Pen Cozy sleeve.
- 
2. Carefully slide the sleeve on the pen, stopping when the holes are aligned over the buttons. Position the holes in the Pen Cozy to fit *around* the buttons, ensuring that no part of the sleeve is in contact with the buttons.

The same qualities that make the Pen Cozy fit snugly and stay in place on your electronic pen, present a challenge getting it on the pen. Some suggestions for making the Pen Cozy easier to slide onto the barrel of the pen include:

- ✓ Using a Q-Tip, apply a **very small** amount of Vaseline, or similar lubricant, to the inside of the Pen Cozy. Slide it onto the pen, using gentle *push* and *pull* motions. If you have long fingernails, use the ends of your fingers, rather than your nails, when gripping the sleeve in order to avoid punctures and tears.
- ✓ Dip your finger into some water and wet the barrel of the pen, keeping the water away from the tip of the pen and the buttons. **Do not** dip the pen in the water.

This is not the preferred method of installation, as shorting out the pen's electronics is always a possibility, when water is involved.