

How To Create/Send Homework

Your Clicker can be used offsite, out of the classroom, to do homework assignments. Your answers to the homework questions are stored in your Clicker's memory. When you are back in the classroom, you will join the Class, as usual, and your instructor will start a Session to collect the homework assignments. You will *send* your homework assignment when instructed to do so. As the homework assignment is being sent, messages will display on your Clicker's LCD screen regarding the status of your transmission.

Accessing Homework Mode

Every time you turn on your Clicker, it will automatically start scanning for Classes. Press the Menu key twice – once to stop the scan and again to display the **Setup Menu**. Scroll to *Homework 1*, *Homework 2*, or *Homework 3*.

Doing a Homework Assignment

Your Clicker's memory has three homework assignment *bins* in which you can store homework assignments. Each of the homework bins has a set of functions—*New (clear all)*, *Continue*, *End*, and *Send*—that make it easy for you to manage your homework assignments.

- **Select a homework bin**

Select a homework bin and press the Enter/Send key to open it.

- **Name the homework assignment**

In the **HMW:** field that displays, enter a four-character name for this homework assignment. Press the Enter/Send key to save it.

The name you have given the homework assignment will appear next to the name of the homework bin in the Setup Menu, so you can readily identify the homework assignment when you want to access it again.

- **Answer the homework questions**

Use the scroll keys to move to the Response Field for the question you want to answer. The Response Fields are numbered **H01** through **H30**. Press the Enter/Send key to save each answer. You do not have to answer the homework questions in order and you can scroll to any answer and change it.

When you have finished the homework assignment, or you are ready to take a break, simply turn off your Clicker.

- ***Continue the homework assignment***

Turn on your Clicker and press the Menu key to get to the homework assignment. Depending on what you did the last time you used your Clicker, you will either go straight to your homework assignment bin, or you will have to scroll to it. Press the Enter/Send key to *continue* to work on your homework assignment, answering questions or changing your answers for previously answered questions. You can change your answers as many times as you want. There is no limit to the number of times you can change the answer to a homework question.

- ***End the homework assignment***

When you have finished answering all the questions in the homework assignment, press the Menu key to display the Homework Mode functions, scroll to the *End* function, and press the Enter/Send key to *end* the homework assignment.

Sending a Homework Assignment

The *Send* function is available only when you are back in the classroom and have joined the Class. Your instructor will start a Session to collect the homework assignments. That's when you will *send* the homework assignment. Press the Menu key to display the **Setup Menu**.

Scroll to the homework bin where this homework assignment is stored and press the Enter/Send key to open it. Scroll, if necessary, to the *Send* function, and press the Enter/Send key to send the homework assignment to the Session. Watch your Clicker display for messages regarding the transmission.

Note:

When you have turned in a homework assignment and are ready to use the homework bin for a new assignment, select the New (clear all) function. It will delete the old homework assignment from the homework bin. You can now begin working on a new homework assignment.